


446-24 Countertop Gift Enclosure Spinning Display

Enjoy the easy to assemble design of our new 446-24 gift card spinner!

Start by checking to make sure you have all the pieces.

- 1 spinning base
- 2 long slot sides
- 2 regular sides
- 1 top
- 12 clear shelves
- 1 bag dividers

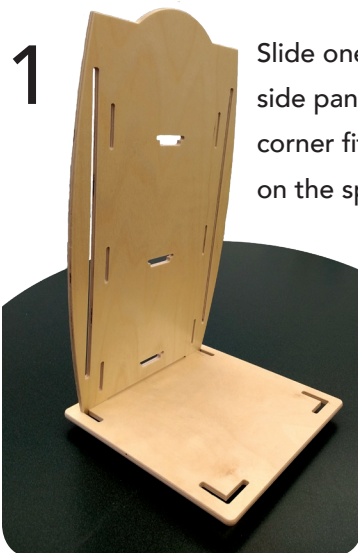

1

Slide one long slot side panel into the corner fitted holes on the spinning base.

Make sure the curve is on the top of the panel as shown.



2

Insert regular side

panel into the first side panel's slot and fit the bottom onto the base. Repeat with the third and fourth side panels.

3

Fit all four panels together with sides fitting together and into the spinning bottom snugly.




4 Push top down with slots over the curved tops of the side panels.



5 Insert the clear shelves into the slots on the sides as shown. Press the tabs all the way in and down to lock shelves in place.



6 Optional. Peel the back from the sticky side of the dividers and press firmly inside each shelf to create a spacer for your cards.

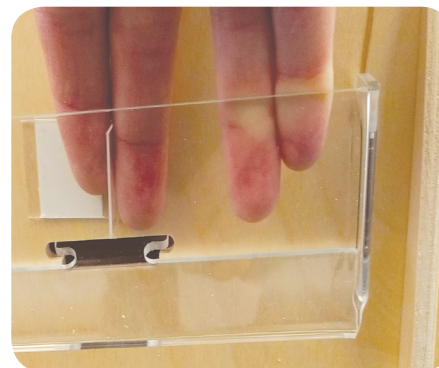

Natural materials, like the wood we use, are prone to irregularities. In some places you will find an area that has been patched or has a small chip. The display is constructed so that the parts can be flipped around, making it possible to construct the display without visible irregularities.