
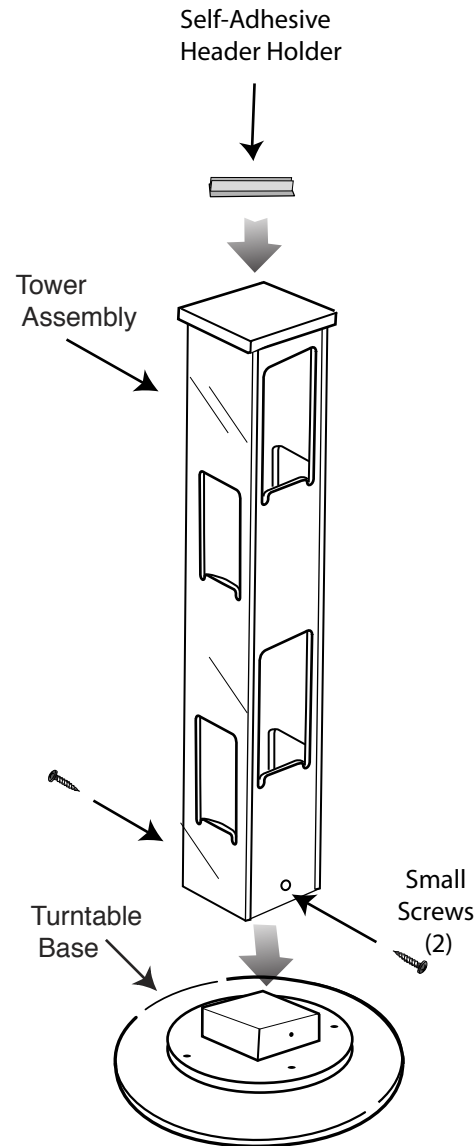


Assembly of the 816 Acrylic Countertop Spinner

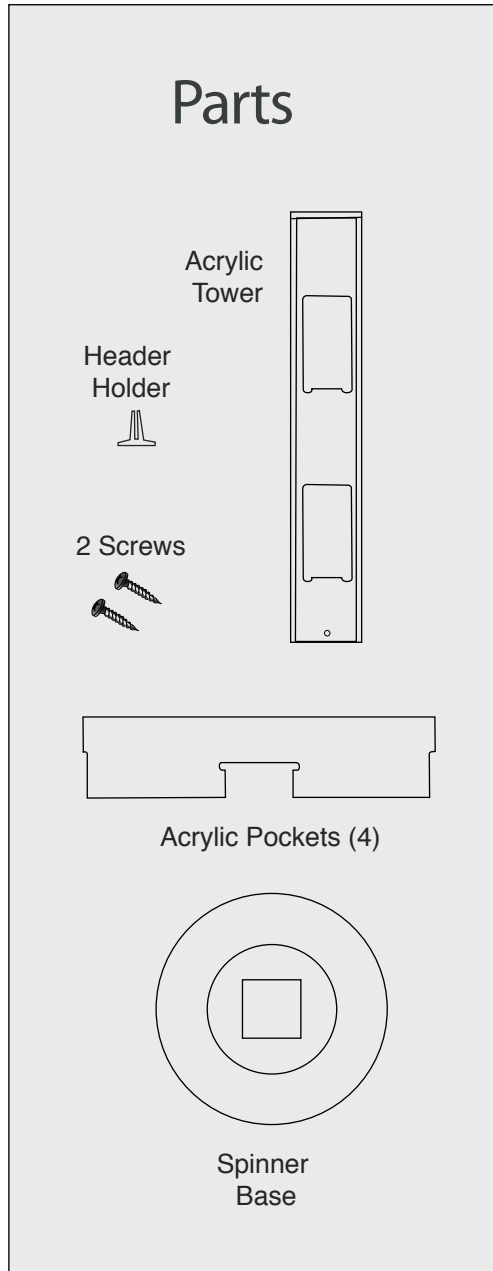

1. Carefully unpack and locate all parts before beginning assembly. Find the Tower Assembly and determine top and bottom.

2. Attach the core tower assembly to the turntable base using the screws. Press the top cap onto the core tower. Peel away the protective layer and attach the Self-Adhesive Header Holder.

3. Starting from the base, slide the Acrylic Pockets into the holes and press down to lock them in place

