 
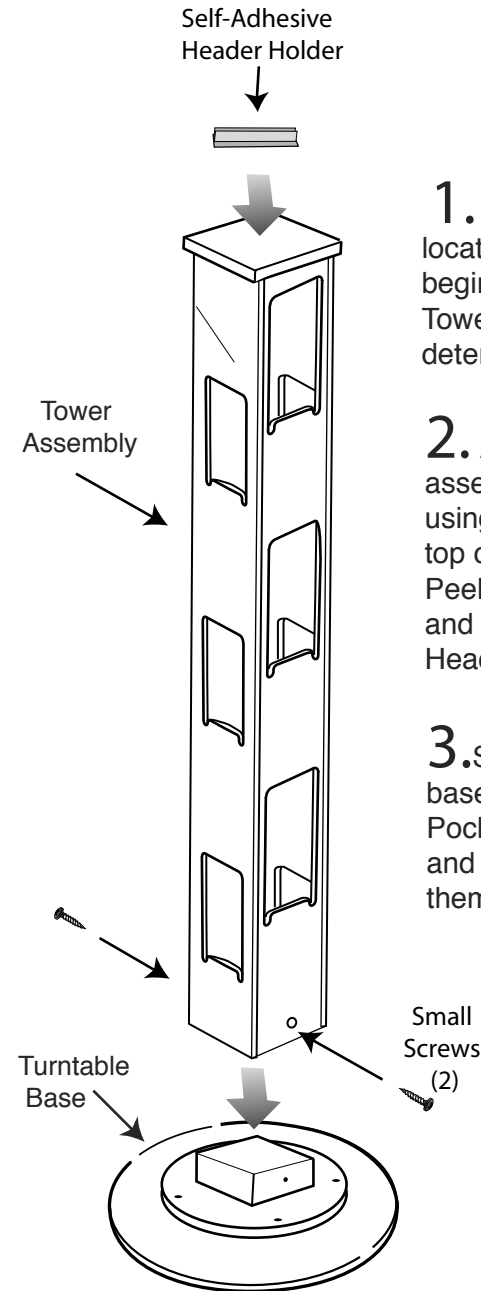 


# Assembly of the 824 Acrylic Countertop Spinner

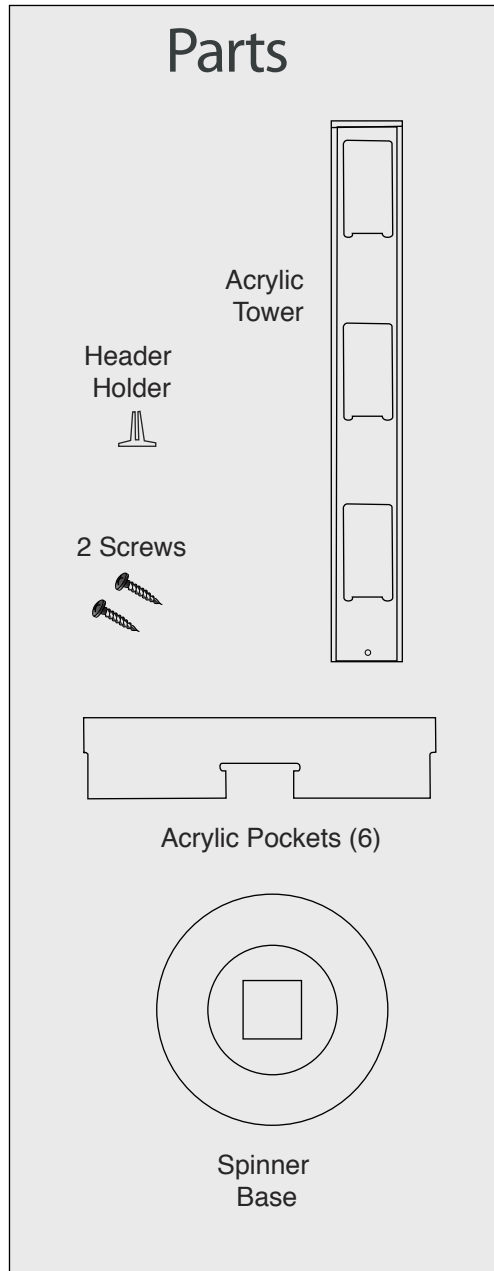

**1.** Carefully unpack and locate all parts before beginning assembly. Find the Tower Assembly and determine top and bottom.

**2.** Attach the core tower assembly to the turntable base using the screws. Press the top cap onto the core tower. Peel away the protective layer and attach the Self-Adhesive Header Holder.

**3.** Starting from the base, slide the Acrylic Pockets into the holes and press down to lock them in place.

