


Assembly Instructions for the Slatwall Spinner

Header Holder

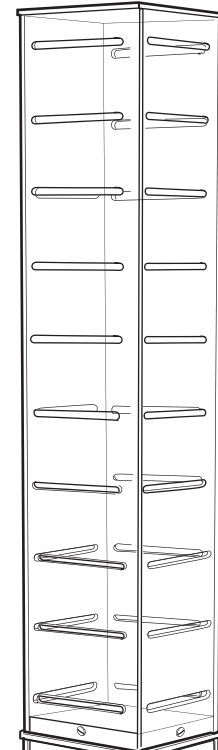


Parts:

- Header Holder
- Top Core
- Connector (attached to Top Core)
- Bottom Core
- Spinner Base
- Machine Screws (10)

Important!


Remove shipping bolts and wingnuts from base before assembly

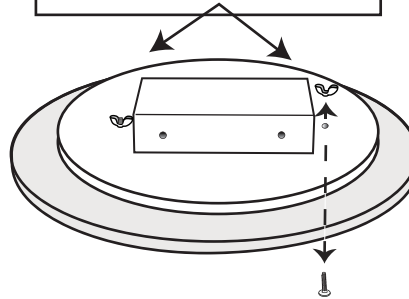


Top Core



 
Connector Block



Screws

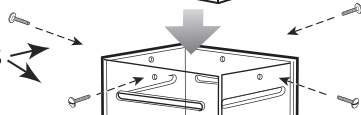

Bottom Core

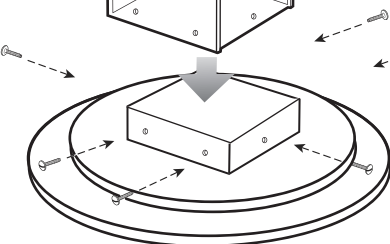


Screws

1, Place Bottom Core over block on base, matching screw holes. Insert a screw in each hole and tighten evenly making sure the core stays seated evenly on base.

2 Place the Top Core (with the Connector attached) on top of the Bottom Core. Fasten securely with the screws.

3 Peel away adhesive film and attach header holder to top.

Assembled Rack

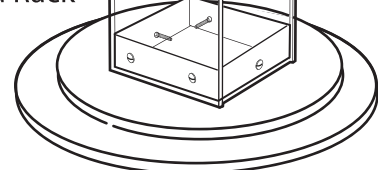

clear solutions Inc. ©Clear Solutions, Inc 7/15/2014